

Portable CD Player

Operating Instructions

Owner's Record

The model number is located at the rear and the serial number is located inside the lid of the CD player. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.


Model No. D-NS505

Serial No. _____

This manual describes how to use the CD player. For the supplied software SonicStage, please see "Installation/Operating Guide."



Atrac3plus

"WALKMAN" is a registered trademark of Sony Corporation to represent Headphone Stereo products.  WALKMAN is a trademark of Sony Corporation.

D-NS505

WARNING

To prevent fire or shock hazard, do not expose the AC power adaptor to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

CAUTION

The use of optical instruments with this product will increase eye hazard.

Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

CAUTION

- INVISIBLE LASER RADIATION WHEN OPEN
- DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENTS
- CLASS 1M INVISIBLE LASER RADIATION WHEN OPEN
- DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

ATRAC3plus and ATRAC3 are trademarks of Sony Corporation.

For customers who purchased this product in the USA

Product registration

Please register this product on line at www.sony.com/walkmanreg
<<http://www.sony.com/walkmanreg>>

Proper registration will enable us to send you periodic mailings about software upgrades, new products, services and other important announcements. Thank you.

If you have any questions about this product, contact:
www.sony.com/walkmansupport

Sony Network Portable Audio Support Line
1-(866)-456-7669

Sony Customer Information Services Center
12451 Gateway Blvd., Ft. Myers, FL 33913

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Table of Contents

Take Lots of Songs with You Wherever You Go..... 4

- Which discs can you play on this CD player?..... 5

Precautions 7

- On safety 7
- On the CD player 7
- On handling CDs 7
- On headphones/earphones 7
- On the water resistance 8

Getting Started

Checking the Supplied Accessories..... 9

Guide to Parts and Controls..... 10

Preparing a Power Source (Dry Batteries) 11

- To remove the batteries 12
- To check the remaining power of the battery 12
- When using the AC power adaptor..... 13

Playback

Playing a CD 14

- Basic playback operations (Play, stop, search) 15
- Locking the controls (HOLD) 16
- Checking CD information 16

Changing Playback Options (PLAY MODE) 17

- Playback options (PLAY MODE) 18
- Playing your favorite tracks (Bookmark track play)..... 19
- Playing tracks in your favorite order (PGM play)..... 19
- Playing tracks repeatedly (Repeat play)... 20

Changing Sound Quality and Settings..... 20

- SOUND item 21
- OPTION items 21

Additional Information

Troubleshooting 23

Maintenance 25

- To clean the casing 25
- To clean the headphones/earphones plug . 25
- To remove any dust or sand from the rubber packing 25

Specifications..... 25

Optional Accessories 26

Index 27

Take Lots of Songs with You Wherever You Go

In addition to the usual audio CDs, you can play an original CD, called “ATRAC CD,” that you create with the supplied software, SonicStage. Using SonicStage, about 30 audio CDs* can be recorded on one CD-R or CD-RW.

The following is a quick overview of how you listen to music on your ATRAC CD.


Install SonicStage on your computer.

SonicStage is software that takes music downloaded from audio CDs on your computer and creates original CDs. It can be installed from the supplied CD-ROM.



Create an ATRAC CD.

After selecting your favorite songs from music stored on your computer, record them on a CD-R/CD-RW using SonicStage.

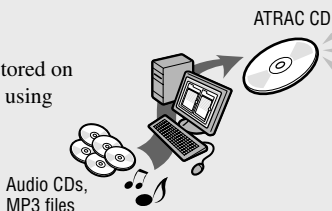

Listen to them with this CD player.

You can take lots of songs wherever you go on your original CD.



Please see the supplied “Installation/Operating Guide” for how to install SonicStage and how to create ATRAC CDs.

* When the total playing time of one CD (album) is estimated at 60 minutes and you are recording on a 700 MB CD-R/CD-RW at 48 kbps in ATRAC3plus format.

Which discs can you play on this CD player?



Audio CDs:

CDDA format CDs

CDDA (Compact Disc Digital Audio) is a recording standard used for Audio CDs.



ATRAC CDs:

CD-R/CD-RW on which audio data compressed in the ATRAC3plus or/and ATRAC3 format has been recorded*

ATRAC3 (Adaptive Transform Acoustic Coding3) is audio compression technology that satisfies the demand for high sound quality and high compression rates.

ATRAC3plus is audio compression technology developed from the ATRAC3 format and can compress audio files to about 1/20 of their original size at 64 kbps.

You can create an ATRAC CD using SonicStage.



MP3 CDs:

CD-R/CD-RW on which audio data compressed in the MP3 format has been recorded*

MP3 (MPEG-1 Audio Layer3) is audio compression technology that can compress audio files to about 1/10 of their original size.

CD-R/CD-RW on which mixed audio data compressed in the ATRAC3plus, ATRAC3, and/or MP3 formats has been recorded by using a software other than SonicStage can also be played.

With SonicStage, you cannot create a CD on which mixed audio data is recorded.

* Only ISO 9660 Level 1/2 and Joliet extension format discs can be played.

Music discs encoded with copyright protection technologies

This product is designed to play back discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

Continued ➞

File structures of ATRAC CDs and MP3 CDs

ATRAC CDs and MP3 CDs consist of “files” and “groups.” A “file” is equivalent to a “track” of an audio CD. A “group” is a bundle of files and is equivalent to an “album.”

For MP3 CDs, this CD player recognizes an MP3 folder as a “group” so that ATRAC CDs and MP3 CDs can be operated in the same way.


The usable number of groups and files

- maximum number of groups: 255
- maximum number of files: 999

Playing order of ATRAC CDs and MP3 CDs

For ATRAC CDs, files are played in the order selected in SonicStage.

For MP3 CDs, the playing order may differ depending on the method used to record MP3 files on the disc. A “play list” which contains an MP3 file playing order can also be recorded. In the following example, files are played in order of ① to ⑦.

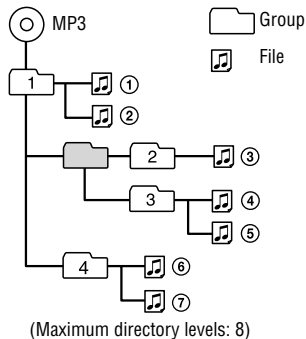

Notes

- If ATRAC3plus/ATRAC3 files and MP3 files are recorded on the same CD, this CD player plays the ATRAC3plus/ATRAC3 files first.
- The playback capability of this CD player may vary depending on the quality of the disc and the condition of the recording device.
- Acceptable characters are A to Z, a to z, 0 to 9, and _ (underscore).
- On a disc that has ATRAC3plus/ATRAC3/MP3 files, do not save files in other formats and do not make unnecessary folders.

About ATRAC CDs

- CD-Rs/CD-RWs recorded in the ATRAC3plus/ATRAC3 format cannot be played on your computer.

About MP3 CDs

- Be sure to add the file extension “mp3” to the file name. However, if you add the extension “mp3” to a file other than an MP3 file, the player will not be able to recognize the file properly.
- This CD player can play bit rates of 16 to 320 kbps and sampling frequencies of 32/44.1/48 kHz. Variable Bit Rate (VBR) files can also be played.
- To compress a source in an MP3 file, we recommend setting the compression parameters to “44.1 kHz,” “128 kbps,” and “Constant Bit Rate.”
- To record up to the maximum capacity, set the writing software to “halting of writing.”
- To record up to the maximum capacity at one time on media that has nothing recorded on it, set the writing software to “Disc at Once.”

Precautions

On safety

- Should any solid objects or liquid fall into the CD player, unplug it and have it checked by qualified personnel before operating it any further.
- Do not put any foreign objects in the DC IN 4.5 V (external power input) jack.

On the CD player

- Keep the lens on the CD player clean and do not touch it. If you do so, the lens may be damaged and the CD player will not operate properly.
- Do not put any heavy object on top of the CD player. The CD player and the CD may be damaged.
- Do not leave the CD player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, unlevelled surface, or in a car with its windows closed.
- If the CD player causes interference to the radio or television reception, turn off the CD player or move it away from the radio or television.
- Discs with non-standard shapes (e.g., heart, square, star) cannot be played on this CD player. Attempting to do so may damage the CD player. Do not use such discs.

On handling CDs

- To keep the CD clean, handle it by its edge. Do not touch the surface.
- Do not stick paper or tape onto the CD.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts. Do not leave the CD in a car parked under direct sunlight.

On headphones/earphones

Road safety

Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headsets at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.


Preventing hearing damage

Avoid using headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Consideration for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

On the water resistance

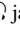
- Before you open the lid, be sure to wipe off water, dust or sand on the exterior of the unit. Open and close the lid where water or sand cannot fall in the unit, and make sure that your hands are dry. If water or sand falls in the unit, trouble may occur.
- When closing the lid, check that there is no dust or sand on the rubber packing around the lid. Then close the lid firmly.
- The supplied headphones are not meant to be immersed in water or come in continuous contact with water. If they are accidentally dropped into water or get wet, dry them with a soft cloth. Never use an electric hair dryer.
- The supplied AC power adaptor is not water resistant. To prevent shock hazard, avoid using the player near water during AC operation.
- Cover the DC IN 4.5 V jack and  jack with the attached rubber caps when nothing is connected to these jacks. If the inside of the jacks are contaminated with water or sand, rust may develop and cause trouble.

Note

Since the unit is airtight, you may not be able to open the lid when there is a sudden change in air pressure inside the unit. This happens when the unit is transported on a plane or moved from a warm place to a cold place. In this case, open the rubber cap on the DC IN 4.5 V jack.

Checking the Supplied Accessories

- AC power adaptor*
- Headphones

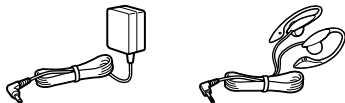

* Not supplied with the US/Canadian models

- CD-ROM (SonicStage)

Do not play this CD-ROM on an audio CD player including this player.




- Operating Instructions (This book)
- SonicStage Installation/Operating Guide

Wearing the supplied headphones

The following procedures are for wearing on the left ear.

- 1 Hook the **L** part over your left ear and the **R** part over your right ear as illustrated.

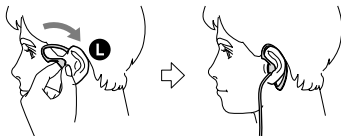


- 2 Hook the headphones around your ears, as you would with glasses.
- 3 Adjust the earpieces to comfortably fit your ears.

Note on handling the supplied headphones

Do not put weight or pressure on the headphones as it may cause the headphones to deform during long storage.

Guide to Parts and Controls

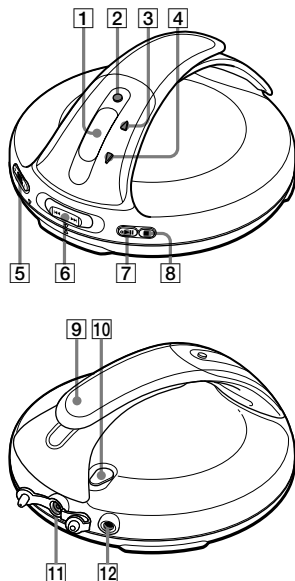


- 1 Display (☞ page 11, 16 - 20)
- 2 DISPLAY/MENU button (☞ page 16, 17, 19, 20)
- 3 button (☞ page 15, 19)
- 4 button (☞ page 15, 19, 20)
- 5 VOL (volume) +/– buttons (☞ page 14)
- 6 lever (☞ page 15, 17 - 21)
- 7 (play/pause)*/ENTER button (☞ page 14, 15, 17 - 20)
- 8 (stop) button (☞ page 15)
- 9 Hand strap
- 10 HOLD switch (☞ page 16)
- 11 (headphones) jack (☞ page 13, 14)
- 12 DC IN 4.5 V (external power input) jack (☞ page 13)

* This button has a tactile dot.

To use the hand strap

During active use, use the hand strap.


- 1 Adjust the length of the strap.
Insert the projecting part of the strap into the grooves firmly.
- 2 Put your hand between the player and the strap.
You can hold your player with either your right or left hand. You can invert the characters on the display according to which hand you use to hold the player (☞ page 21).

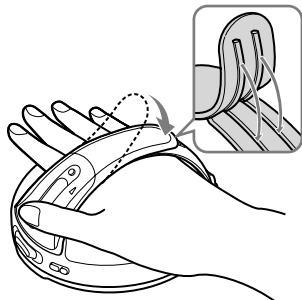

Notes on the hand strap

- Do not push on the LCD and/or the parts around it forcibly.
- Do not twist or pull the hand strap strongly.
- Do not pull the hand strap up or down forcibly.

To open the lid

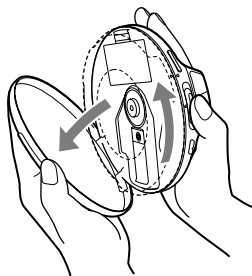

Hold the CD player with both hands as illustrated, and turn the lid toward OPEN until you hear a click. Open the lid when the ▽ mark and the Δ mark are aligned.


To close the lid, turn it toward LOCK until the ▽ mark and the Δ mark are aligned.

When you open or close the lid, be careful not to pinch your fingers between the CD player and its lid.

Notes

- If you try to open the lid forcibly without the ▽ mark and the Δ mark aligned correctly, the lid might be damaged.
- If the lid is not locked, the CD will not play.

Display

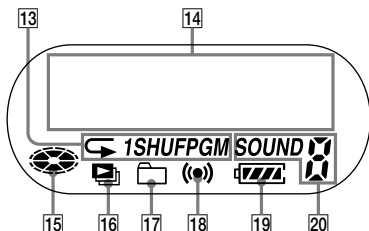

- 13 Play mode indicator (☞ page 18)
- 14 Character information display (☞ page 16 - 20)
- 15 Disc indicator (☞ page 14)
- 16 Play list indicator (☞ page 18)
- 17 Group indicator (☞ page 18)
- 18 Timer indicator (☞ page 21)
- 19 Battery indicator (☞ page 12)
- 20 SOUND indicator (☞ page 21)

Note


You can invert the characters on the display (☞ page 21).

Preparing a Power Source (Dry Batteries)


Use only the following dry battery type for your CD player:

- LR6 (size AA) alkaline batteries

- 1 Turn the lid of the CD player toward OPEN until the ▽ mark and the Δ mark are aligned so that you can open the lid.

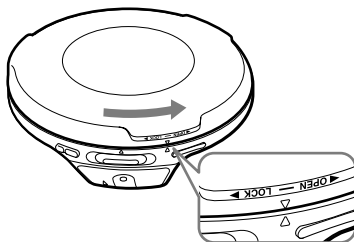


- 2 Open the lid of the battery compartment.

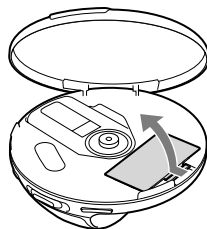

Continued ➞


- 3** Insert two LR6 (size AA) batteries by matching the \oplus to the diagram in the battery compartment and close the lid until it clicks into place.

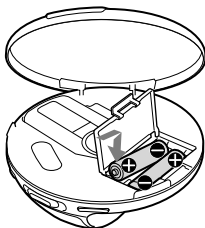

Insert the \ominus end first (for both batteries).


To remove the batteries

Remove the batteries as illustrated below.

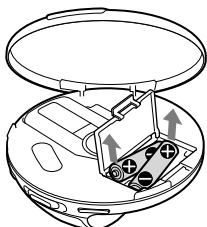



To attach the battery compartment lid

If the battery compartment lid is detached by an accidental drop, excessive force, etc., attach it as illustrated below.

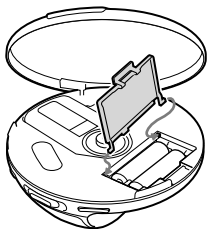

To check the remaining power of the battery

The remaining power of the battery is indicated in the display as shown below. As the black indicator section decreases, the remaining power is depleted further.

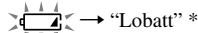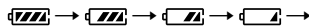

* Beep sounds.

When the batteries are depleted, replace both batteries with new ones.

Notes

- The display shows the approximate battery power remaining. For example, one section does not always indicate one-fourth of the battery power.
- Depending on the operating conditions, the display may increase or decrease relative to the actual power remaining.

Battery life ¹⁾

Playing time shown is approximate hours, when you use the player on a flat and stable surface and "SOUND" is set to "OFF" (see page 21). This value varies depending on how the player is used.

When using two Sony alkaline batteries LR6(SG) (produced in Japan)

	G-PROTECTION	
	"G-PRO1"	"G-PRO2"
Audio CD	50	45
ATRAC CD ²⁾	90	90
MP3 CD ³⁾	70	70

1) Measured value using the JEITA standard (Japan Electronics and Information Technology Industries Association)

2) Recorded at 48 kbps


3) Recorded at 128 kbps

Notes on dry batteries

- Do not throw the batteries into a fire.
- Do not carry batteries in a pocket, etc. with coins or other metallic objects. The battery can generate heat if its positive and negative terminals are accidentally allowed to come into contact with a metallic object.
- Do not mix new batteries with old ones.
- Do not use different types of batteries together.
- When the batteries are not to be used for a long time, remove them.
- If battery leakage occurs, wipe off any deposit left in the battery compartment, and install new batteries. If the deposit adheres to your skin, wash it off thoroughly.

When using the AC power adaptor

You can use the player powered by the AC power adaptor without batteries.

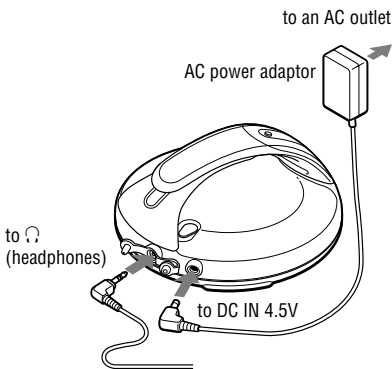

Notes on the AC power adaptor

- Disconnect all power sources when the player is not to be used for a long time.
- Use only the AC power adaptor supplied. If your player is not supplied with the one, use an AC-E45HG AC power adaptor. If you use any other AC power adaptor, malfunction may occur.




Polarity of the plug

- Do not touch the AC power adaptor with wet hands.
- Connect the AC power adaptor to an easily accessible AC outlet. Should you notice an abnormality in the AC power adaptor, disconnect it from the AC outlet immediately.


Playing a CD

- 1 Turn the lid of the CD player toward **OPEN** until the ▽ mark and the △ mark are aligned so that you can open the lid.


Connect the headphones to the player beforehand.

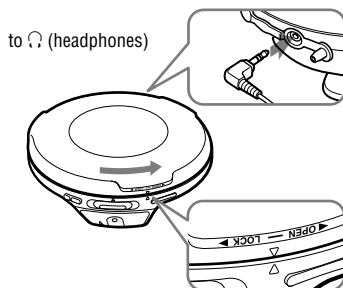

- 2 Place the CD on the tray.

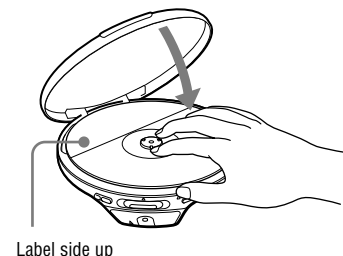


- 3 Turn the lid of the CD player toward **LOCK** until the ▽ mark and the △ mark are aligned and the lid is locked.

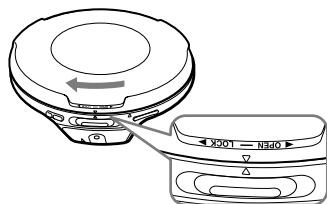


- 4 Press ►II/ENTER.

(disc) moves, and the player starts playback.

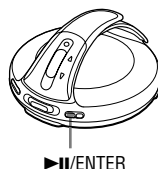


- 5 Adjust the volume by pressing the VOL +/-.

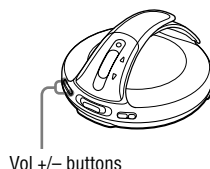

To remove the CD

Remove the CD while pressing the pivot in the center of the tray.

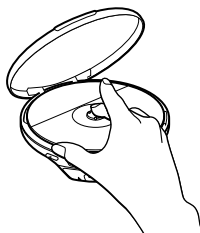

Basic playback operations (Play, stop, search)

To	Operation
Play	Play from a point where you stopped the player previously Press ►II/ENTER. Playback starts from the point where you stopped.
	Play from the first track While the CD player is stopped, press and hold ►II/ENTER until the play of the first track starts.
Stop	Pause/Resume play after pausing Press ►II/ENTER.
	Stop playback Press ■.
Search	Find the beginning of the current track ¹⁾ Flick the lever toward I◀◀.
	Find the beginning of previous tracks ¹⁾ Flick the lever toward I◀◀ repeatedly.
	Find the beginning of the next track ¹⁾ Flick the lever toward ►►I.
	Find the beginning of succeeding tracks ¹⁾ Flick the lever toward ►►I repeatedly.
	Go backwards quickly ^{1) 3)} Hold the lever toward I◀◀.
	Go forward quickly ^{1) 3)} Hold the lever toward ►►I.
	Jump to succeeding groups ²⁾ Press ◻ (group) ▷ repeatedly.
	Jump to previous groups ²⁾ Press ◻ (group) ◁ repeatedly.

1) You can operate during both play and pause.

2) You can operate during play of ATRAC CDs/MP3 CDs only.

3) You cannot operate when using an MP3 file recorded on a CD-R/CD-RW in a packet write format.

Locking the controls (HOLD)

You can prevent accidental button presses while carrying the player by locking the controls. “HOLD” flashes on the display if you press any button when the HOLD function is activated.

1 Slide the HOLD switch in the direction of the arrow.

To unlock the controls

Slide the HOLD switch in the direction opposite to that of arrow.

Checking CD information

You can check CD information on the display. When you are playing an audio CD containing text information such as CD-TEXT, information in parentheses is displayed. When you are playing an MP3 CD containing files with an ID3 tag*, ID3 tag information is displayed. (When there is no ID3 tag information, “- - -” is displayed.)

* ID3 tag is a format for adding certain information (track name, album name, artist name, etc.) to MP3 files. This player conforms to Version 1.1/2.2/3 of the ID3 tag format (for MP3 files only).

Notes


- The characters A-Z, a-z, 0-9, and _ can be displayed on this player.
- Before playing a file, the player reads all file and group (or folder) information on the CD. “READING” is displayed. Depending on the content of the CD, it may take some time to accomplish this reading.
- If the file does not belong to any group, the group name is displayed as “ROOT.”

To check information on the display


Press DISPLAY/MENU repeatedly.

Audio CD


Track number, elapsed playing time
(Track name)

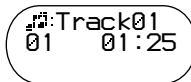


Track number, remaining time of
the current track (Track name, artist name)

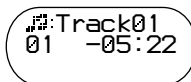

Number of tracks left ¹⁾, time remaining on
the CD ¹⁾
(Album name, artist name)

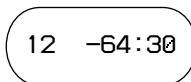

File view screen
(Track name)

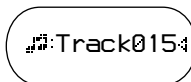

File name ²⁾, file number, elapsed playing time

Beauti
001 03:40

Artist name, CODEC information ³⁾, file number,
remaining time of the current file

IS THAT
001 -02:21

Group name ²⁾, total number of files

Tribute
total 148

File view screen
(Group name ²⁾, file name ²⁾)

Tribute
Legend/4

1) The displays appear only during normal play.

2) During play, "artist name" is not displayed if the disc does not have ID3 tag information. When the list of group names/file names appears on the display, "artist name" and "group name" are not displayed.

3) Bit rate and sampling frequencies are displayed. While an MP3 file made at VBR (variable bit rate) is being played, "VBR" appears on the display instead of a bit rate. In some cases, "VBR" appears halfway through playback, rather than from the beginning.

Changing Playback Options (PLAY MODE)

You can use various playback options such as selecting songs you want to listen to, and playing songs in your favorite order.

For details about playback options, see [page 18](#).

You can also play songs repeatedly using the playback options you choose (repeat play, [page 20](#)).

- 1 Press **DISPLAY/MENU** until the **MENU** screen appears.

MENU
> REPEAT

- 2 Flick the lever toward **◀◀** or **▶▶** to select "PLAY MODE," and then press **▶II/ENTER***.

* You can also use **DISPLAY/MENU** to enter the selection as well as **▶II/ENTER**.

MENU
> PLAY MODE

- 3 Flick the lever toward **◀◀** or **▶▶** to select the playback options.

The default setting is "ALL" (normal play).

MENU
> GROUP





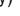


Playback options appear here.

To return to normal play

Select "ALL" in the PLAY MODE menu.

Playback options (PLAY MODE)

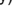When you select Bookmark track play or PGM play, you need to select the songs you want to listen to. See  page 19 for how to select tracks.

Display	Explanation
ALL (Normal play)	All tracks on the CD are played in a track number order.
GROUP (Group play)	All tracks in the selected group are played (ATRAC CD/MP3 CD only).
1 (Single play)	The current track is played once.
SHUFFLE (Shuffle play)	All tracks on the CD are played once in random order.
GP SHUF (Group shuffle play)	All tracks in the selected group are played once in random order (ATRAC CD/MP3 CD only).
PLAY LIST (m3u play list play)	Tracks in the selected m3u play list* are played (MP3 CD only). After selecting “PLAY LIST,” flick the lever toward  or  to select a play list, and then press  /ENTER.
BOOK MARK (Bookmark track play)	Tracks to which Bookmarks have been added are played ( page 19).
AUTO RANK (Auto ranking play)	The tracks you have played most frequently from the CD are played from the 10th to the first. After selecting “AUTO RANK,” press  /ENTER.
RANK SHUF (Auto ranking shuffle play)	Up to 32 tracks, which the player has automatically memorized as the most frequently played ones, are played in random order. After selecting “RANK SHUF,” press  /ENTER.
PROGRAM (PGM play)	Up to 64 tracks are played in your favorite order ( page 19).

*An m3u play list is a file in which an MP3 file playing order has been encoded. To use the play list function, record MP3 files on a CD-R/CD-RW using encoding software that supports the m3u format.

Playing your favorite tracks (Bookmark track play)

- 1 During play of the track to where you want to add a Bookmark, press and hold ►II/ENTER until ⏏ disappears and 📌 flashes instead.
- 2 If you want to add a Bookmark to two or more tracks, repeat step 1.
You can add Bookmarks to up to 10 CDs for audio CDs (up to 99 tracks for each CD) and up to 5 CDs for ATRAC CDs/MP3 CDs (up to 999 tracks for each CD).
- 3 Press and hold DISPLAY/MENU until the MENU screen appears.
- 4 Flick the lever toward ◀◀ or ▶▶ to select "PLAY MODE," then press ►II/ENTER.
- 5 Flick the lever toward ◀◀ or ▶▶ to select "BOOK MARK," then press ►II/ENTER.
📌 lights up, and the play of tracks with Bookmarks starts in track number order, not in the order you added the Bookmarks.

To remove Bookmarks


During play of a track with a Bookmark, press and hold ►II/ENTER until 📌 disappears.

Notes

- If you try to add Bookmarks to tracks on an 11th CD (on a 6th CD when playing ATRAC CDs/MP3 CDs), the Bookmarks of the CD you played first will be erased.
- All Bookmarks stored in memory will be erased if you remove all power sources.

Playing tracks in your favorite order (PGM play)

- 1 While the player is stopped, select "PROGRAM" in step 3 of the player operation for "Changing Playback Options (PLAY MODE)" (📖 page 17), and then press ►II/ENTER.

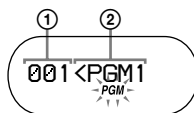

- ① Track number (audio CD/CD-TEXT) or playing order (ATRAC CD/MP3 CD)
 - ② Playing order (audio CD/CD-TEXT) or file name (ATRAC CD/MP3 CD)
- 2 Flick the lever toward ◀◀ or ▶▶ to select the track and press DISPLAY/MENU to enter the selection.
You can also select a track in another group by pressing [] (group) ◀/▶ when playing an ATRAC CD/MP3 CD.
 - 3 Repeat step 2 to select tracks in your favorite order.
You can select up to 64 tracks.
When you finish entering the 64th track, the track number selected first (audio CD)/file name (ATRAC CD/MP3 CD) appears on the display.
If you select 65 tracks or more, the tracks selected first are erased one by one.
 - 4 Press ►II/ENTER.
"PGM" lights up on the display and playback starts in the selected order.

To check the program

While programming, press DISPLAY/MENU repeatedly before step 4.

Playing tracks repeatedly (Repeat play)

- 1 Select the playback option you want to repeat (☞ page 18).
- 2 Press and hold DISPLAY/MENU until the MENU screen appears.
- 3 Flick the lever toward I◀◀ or ▶▶I to select “REPEAT,” and then press ▶II/ENTER.
- 4 Flick the lever toward I◀◀ or ▶▶I to select “ON,” then press ▶II/ENTER to enter the selection.

To return to normal play

Select “OFF” in step 4.

Changing Sound Quality and Settings

For details about various setting items, see ☞ page 21.

- 1 Press DISPLAY/MENU until the MENU screen appears.



- 2 Flick the lever toward I◀◀ or ▶▶I to select “SOUND” or “OPTION,” and then press ▶II/ENTER. If you select “OPTION,” flick the lever toward I◀◀ or ▶▶I to select the item you want to set up, and then press ▶II/ENTER.
- 3 Flick the lever toward I◀◀ or ▶▶I to select an option, and then press ▶II/ENTER.

To return to the previous screen (except PGM play)

Press ☐ (group) ◀.

To cancel set up

Press ■.

SOUND item

Item	Options (●: Default setting)	
SOUND (Sound setting)	● OFF	Normal sound quality
	SOFT	For vocal, stressing middle range audio
	ACTIVE	Lively sounds, emphasizing high and low range audio
	HEAVY	Powerful sounds, further emphasizing high and low ranges compared with ACTIVE sound

OPTION items

Items	Options (●: Default settings)	
DIRECTION ¹⁾ (Inverting the characters on the display)	● NORMAL	The characters appear on the display in the normal direction.
	REVERSE	The characters appear on the display in the reverse direction so that you can read them from the opposite side. The ◀▶, ▶▶ lever and the ◀▶ buttons operate in the opposite direction. Play mode icons and indicators cannot be inverted.
G-PROTECTION (G-PRO SET) ¹⁾ (To prevent sound skipping)	● G-PRO 1	Protection against sound skipping is provided with high quality CD sound.
	G-PRO 2	Enhanced protection against sound skipping is provided.
AVLS ²⁾ (Limiting volume)	ON	The maximum volume is limited to protect your hearing.
	● OFF	The volume changes without limiting the volume level.
TIMER (Off timer)	1-99 min.	⏻ lights up. You can check the remaining playback time by selecting this option during play. Flick the lever toward ◀▶ or ▶▶ repeatedly to increase or decrease the length of time by 5 minutes, or hold the lever toward ◀▶ or ▶▶ for 2 seconds or more to increase or decrease by 1 minute. The default setting is "10 min."
	● OFF	The timer does not work.

1) You can set this up only while the player is stopped.

2) AVLS is an abbreviation of the Automatic Volume Limiter System.

Continued ➞

Items	Options (●: Default settings)	
BEEP (Sound of operation)	● ON	The beep sounds when you operate the player.
	OFF	The beep is turned off.
SEAMLESS ¹⁾ (Playing tracks continuously)	ON	The CD is played without space between tracks.
	● OFF	The CD is played as recorded on the disc, including spaces between tracks.

1) You can set this up only while the player is stopped. This function works only for ATRAC CDs.

Notes

- Even if “G-PROTECTION” is activated, sound may skip:
 - when the CD player receives stronger continuous shock than expected,
 - when a dirty or scratched CD is played, or
 - for CD-Rs/CD-RWs, when a poor-quality disc is played or there is a problem with the original recording device or application software.
- Even if “SEAMLESS” is set to “ON,” the tracks may not play continuously depending on how the source music was recorded.

Troubleshooting

Should any problem persist after you have checked these symptoms, consult your nearest Sony dealer.

Sound

Symptom	Cause and/or corrective action
The volume does not increase even if you press VOL + repeatedly.	→ "AVLS" is set to "ON." Set it to "OFF" (Ⓜ page 21).
No sound, or noise is heard.	→ Connect the headphones/earphones plugs firmly. → The plugs are dirty. Clean the headphones/earphones plugs with a dry soft cloth periodically.
A rustling noise is heard from the CD.	→ Close the lid of the battery compartment firmly (Ⓜ page 12).

Operation/Playback

Symptom	Cause and/or corrective action
The playing time is too short. The CD does not play.	→ Check that you are using alkaline batteries and not manganese batteries. → Replace the dry batteries with new LR6 (size AA) alkaline batteries (Ⓜ page 11).
Certain tracks cannot be played.	→ You tried to play files saved in a format that is not compatible with this player (Ⓜ page 5, 6).
"Lobatt" appears on the display, and the CD does not play.	→ Replace the dry batteries with new LR6 (size AA) alkaline batteries (Ⓜ page 11).
"Hi DC in" appears on the display.	→ An AC power adaptor which is rated higher than the one supplied or recommended is being used. Use only the supplied AC power adaptor or the car battery cord recommended in "Optional Accessories" (Ⓜ page 26).

Continued ➞

Symptom	Cause and/or corrective action
The CD does not play, or “No disc” appears on the display when a CD is placed in the player.	<ul style="list-style-type: none"> → The CD is dirty or defective. Clean it or change it. → Check that the CD is inserted with the label side up (☞ page 14). → Moisture condensation has occurred. Leave the CD player aside for several hours until the moisture evaporates. → Close the lid of the battery compartment firmly (☞ page 12). → Make sure the batteries are inserted correctly (☞ page 12). → Connect the AC power adaptor to an AC outlet securely (☞ page 13). → Press ►II/ENTER after one second or more has passed since the AC power adaptor was connected. → The CD-R/CD-RW in the player is blank. → There is a problem with the quality of the CD-R/CD-RW, recording device, or application software.
“HOLD” flashes on the display when you press a button, and the CD does not play.	<ul style="list-style-type: none"> → The buttons are locked. Slide the HOLD switch back (☞ page 16).
Playback starts from the point you stopped (resume function).	<ul style="list-style-type: none"> → The resume function is working. To start play from the first track, press and hold ►II/ENTER until the first track starts playing, or open the lid of the player (☞ page 14). Or, remove all power sources, and then insert the batteries or connect the AC power adaptor again.
During playback of an ATRAC CD or MP3 CD, the CD does not rotate but you can hear the sound normally.	<ul style="list-style-type: none"> → This player is designed to stop the rotation of an ATRAC CD or MP3 CD during playback to reduce the power consumption. The player is not malfunctioning.
“NO FILE” appears on the display after you press ►II/ENTER or when the lid of the player is locked.	<ul style="list-style-type: none"> → There are no ATRAC3plus/ATRAC3/MP3 files on the CD. → A CD-RW from which the data has been erased is being used. → The CD is dirty.
The LCD display becomes hard to see or slows down.	<ul style="list-style-type: none"> → You are using your CD player at high temperatures (above 40°C/104°F) or at low temperatures (below 0°C/32°F). At room temperature, the display will return to its normal operating condition.
Play stopped abruptly.	<ul style="list-style-type: none"> → The off timer has been set. Change the setting of “TIMER” to “OFF” (☞ page 21). → The dry batteries are used up completely. Replace the dry batteries with new LR6 (size AA) alkaline batteries (☞ page 11).

Others

Symptom	Cause and/or corrective action
When closing the lid of the CD player, the CD starts to rotate.	<ul style="list-style-type: none"> → The player is reading the information on the CD, not malfunctioning.

Maintenance

To clean the casing

Use a soft cloth slightly moistened in water or a mild detergent solution. Do not use alcohol, benzene or thinner.

To clean the headphones/earphones plug

Keep the plug of your headphones/earphones clean to obtain optimum sound. Wipe it with a dry, soft cloth.

To remove any dust or sand from the rubber packing

Any sand or dust on the rubber packing will prevent the lid from shutting tightly, and water may leak in. Brush off the dust once in a while.

We recommend the replacement of the rubber packing every year which is available optionally at an authorized Sony service facility.

Specifications

System

Compact disc digital audio system

Laser diode properties

Material: GaAlAs

Wavelength: $\lambda = 770 - 800 \text{ nm}$

Emission duration: Continuous

Laser output: Less than 44.6 μW

(This output is the value measured at a distance of 200 mm from the objective lens surface on the optical pick-up block with 7 mm aperture.)

D-A conversion

1-bit quartz time-axis control

Frequency response

20 - 20 000 Hz ± 1 dB (measured by JEITA)

Output (at 4.5 V input level)

Headphones (stereo minijack)

Approx. 5 mW + Approx. 5 mW at 16 Ω

Power requirements

- LR6 (size AA) batteries: 1.5 V DC \times 2
- AC power adaptor (DC IN 4.5 V jack): 120 V, 60 Hz

Operating temperature

5°C - 35°C (41°F - 95°F)

Dimensions (w/h/d) (excluding projecting parts and controls)

Approx. 136 \times 30.5 \times 136 mm ($5\frac{3}{8} \times 1\frac{1}{4} \times 5\frac{3}{8}$ in.)

Mass (excluding accessories)

Approx. 250 g (8.9 oz.)

US and foreign patents licensed from Dolby Laboratories.

Design and specifications are subject to change without notice.

Optional Accessories


 



 
AC power adaptor *	AC-E45HG
Active speaker system	SRS-Z1 SRS-Z30
Car battery cord	DCC-E345
Car battery cord with car connecting pack	DCC-E34CP
Car connecting pack	CPA-9C
Connecting cord	RK-G129 RK-G136
Earphones	MDR-E818LP MDR-J10

* Specifications for AC power adaptors vary for each area. Check your local voltage and the shape of the plug before purchasing.

Your dealer may not handle some of the accessories listed above. Please ask the dealer for detailed information about the accessories in your country/region.

Index

Symbols

-  (Battery) 12
-  (Bookmark track play) 18, 19
-  (Group play) 18
-  SHUF (Group shuffle play) 18
-  (m3u play list play) 18
- PGM (program play) 18, 19
- 1 (Single play) 18
-  (Timer) 21

A

- a00 (Auto ranking play) 18
- ACTIVE 21
- AC power adaptor 13
- ALL (Normal play) 17, 18
- ATRAC3plus/ATRAC3 5
- ATRAC CD 5
- Auto ranking play 18
- Auto ranking shuffle play 18
- AVLS 21

B

- Battery life 12
- BEEP 22
- Bookmark track play 18, 19

C

- CD-ROM (SonicStage) 9
- CDDA format 5

D

- Display 11, 16

G

- G-PROTECTION 21
- Group 6
- Group play 18
- Group shuffle play 18

H

- Headphones 9
- HEAVY 21
- HOLD function 16

I

- ID3 tag 16

M

- m3u play list play 18
- MP3 CD 5

N

- Normal play 15, 18

O

- OPTION 21

P

- Pause 15
- PLAY LIST (m3u play list play) 18
- Program (PGM) play 18, 19

R

- RANK SHUF (Auto ranking shuffle play) 18
- Repeat play 20

S

- SEAMLESS 22
- Search 15
- Shuffle play 18
- Single play 18
- SOFT 21
- SonicStage 4
- SOUND 21
- Stop 15

T

- TIMER 21

This warranty is valid only in the United States.

SONY®

Portable Memory Stick Audio Player/
Portable MiniDisc Recorder/
Portable CD Player

Portable Audio

LIMITED WARRANTY

Sony Electronics Inc. ("Sony") warrants this Product (including any accessories) against defects in material or workmanship as follows:

1. **LABOR:** For a period of 90 days from the date of purchase, if this Product is determined to be defective, Sony will repair or replace the Product, at its option, at no charge, or pay the labor charges to any Sony authorized service facility. After the Warranty Period, you must pay for all labor charges.

2. **PARTS:** In addition, Sony will supply, at no charge, new or rebuilt replacements in exchange for defective parts for a period of one (1) year. After 90 days from the date of purchase, labor for removal and installation is available from Sony authorized service facilities or a Sony Service Center at your expense.

To obtain warranty service, you must take the Product, or deliver the Product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, to any authorized Sony service facility.

This warranty does not cover customer instruction, installation, set up adjustments or signal reception problems.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or modification of, or to any part of the Product, including the antenna. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Sony to service the Product. This warranty does not cover Products sold AS IS or WITH ALL FAULTS, or consumables (such as fuses or batteries). This warranty is valid only in the United States.

Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the Warranty period must be presented to obtain warranty service.

This warranty is invalid if the factory applied serial number has been altered or removed from the Product.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In addition, if you enter into a service contract with the Sony Partnership within 90 days of the date of sale, the limitation on how long an implied warranty lasts does not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

For your convenience, Sony Electronics Inc. has established telephone numbers for frequently asked questions:

To locate the servicer or dealer nearest you, or for service assistance or resolution of a service problem, or for product information or operation, contact:

www.sony.com/walkmansupport

Sony Network Portable Audio Support Line
1-866-456-7669

For an accessory or part not available from your authorized dealer, call:

1-800-488-SONY (7669)

D 324343303

<http://www.sony.net/>

Sony Corporation Printed in Malaysia



* 3 2 6 7 2 0 7 1 1 * (1)